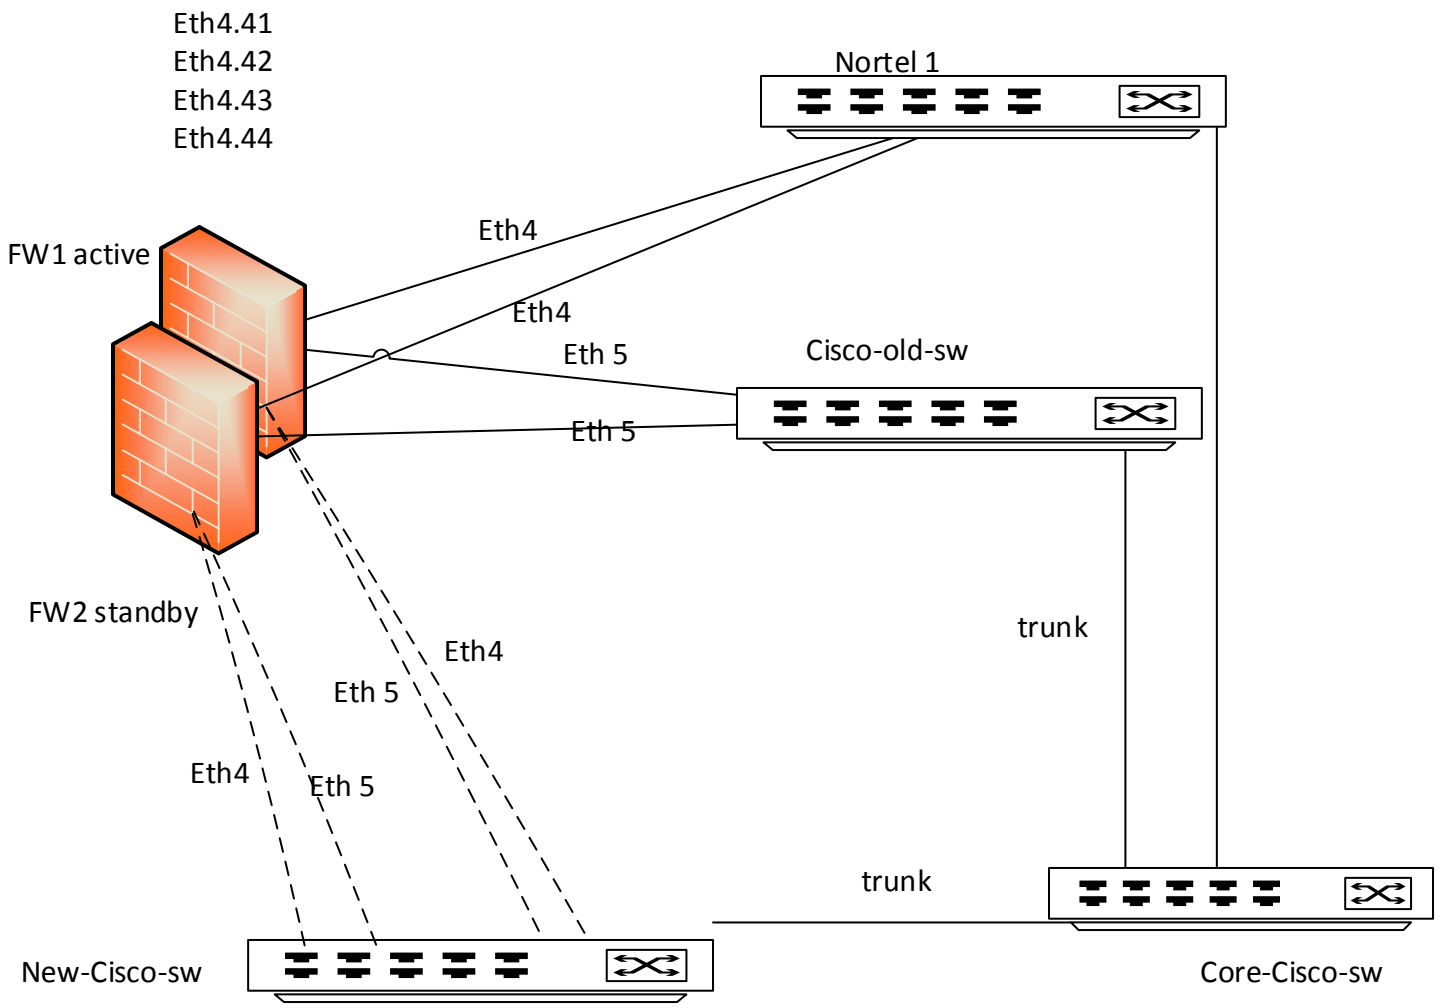
Eth4.41
Eth4.42
Eth4.43
Eth4.44
Nortel 1
FW1 active
Eth4
Eth4
Eth 5
Cisco-old-sw
Eth 5
FW2 standby
trunk
Eth4
Eth 5
Eth4
Eth 5
trunk
New-Cisco-sw
Core-Cisco-sw